



WIKING  
LUMA 1



WIKING  
LUMA 2



WIKING  
LUMA 3



WIKING  
LUMA 4



WIKING  
LUMA 5




WIKING  
LUMA 6


# Contents

Drawings .....	3-7
Installation .....	9
Firing manual - wood.....	15
Firing in general .....	18
Maintenance.....	19
Declaration of Performance.....	21
Product informaiton EcoDesign .....	22
Trouble Shooting .....	23
Guarantee Certificate .....	24


**A1**


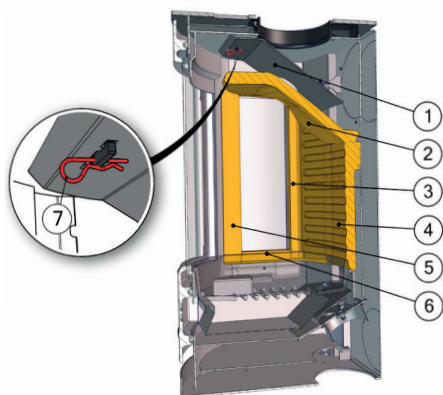


**A2**

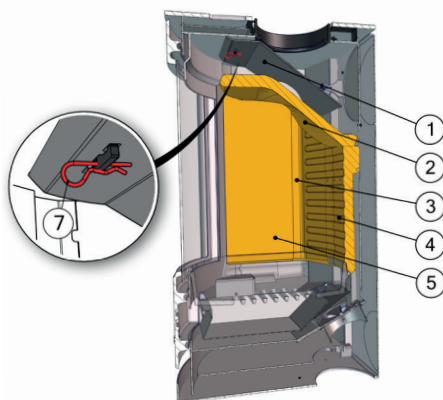


**B1**

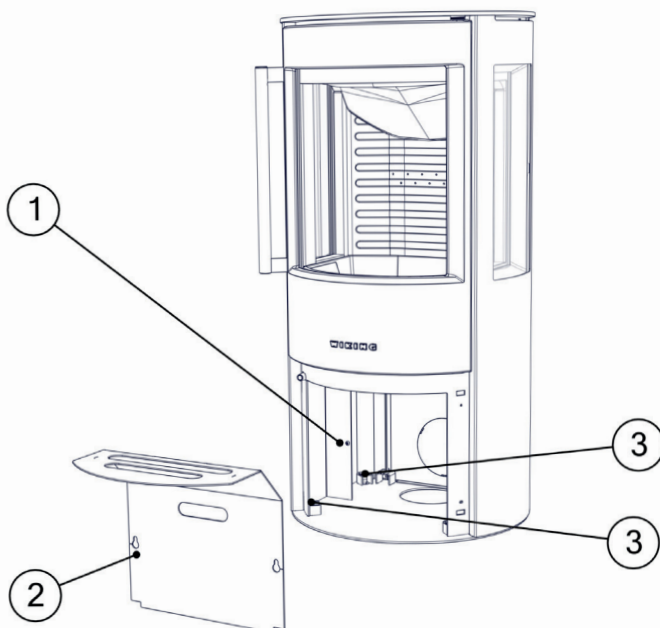


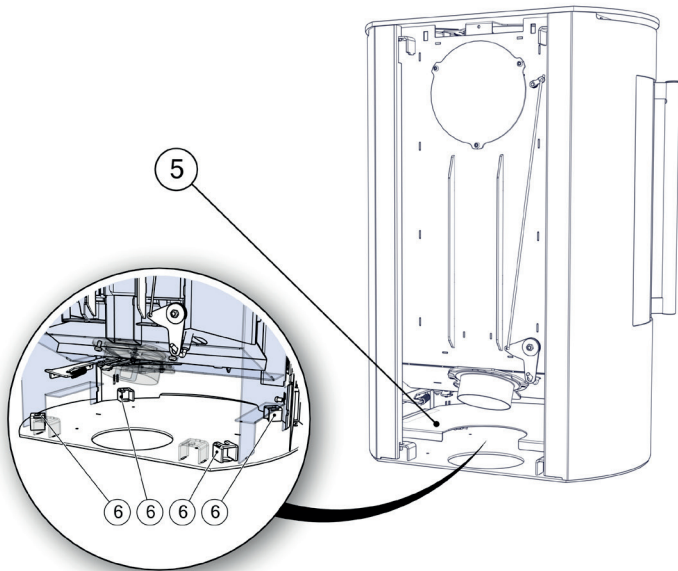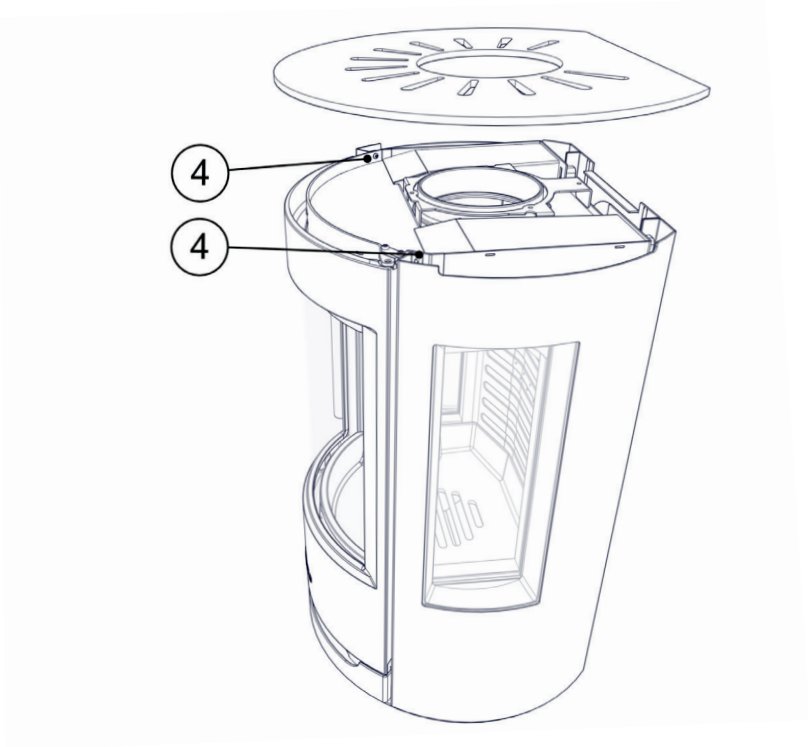


C



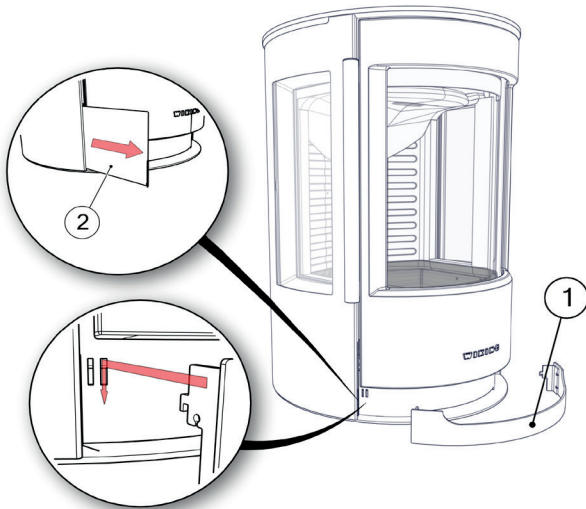


E1

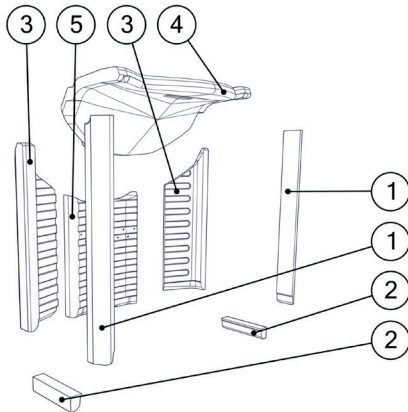


E2

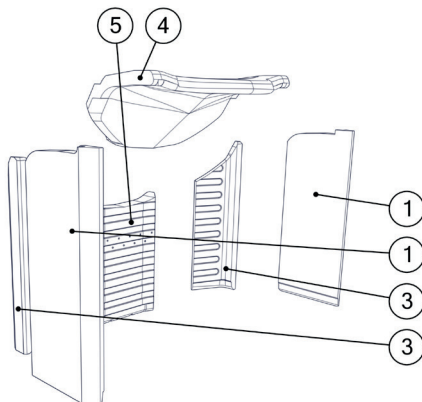

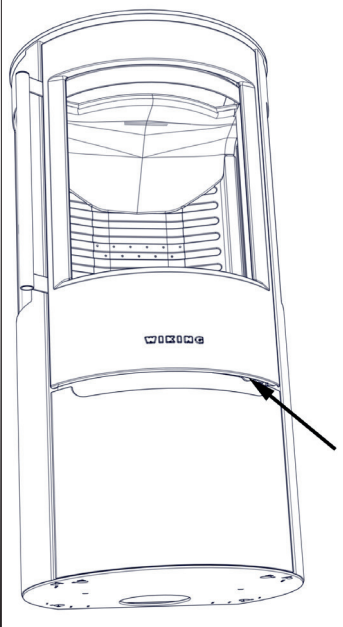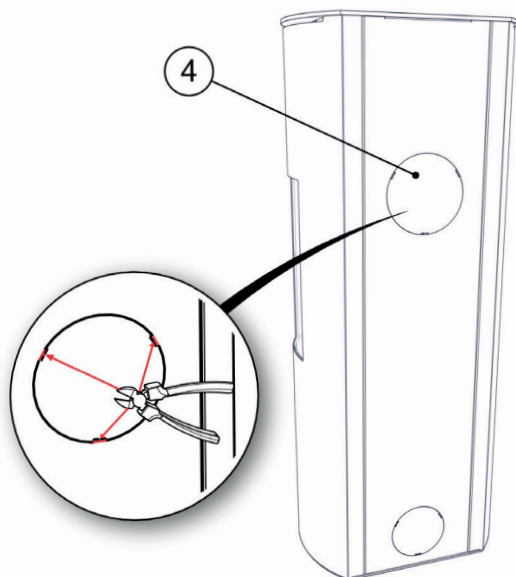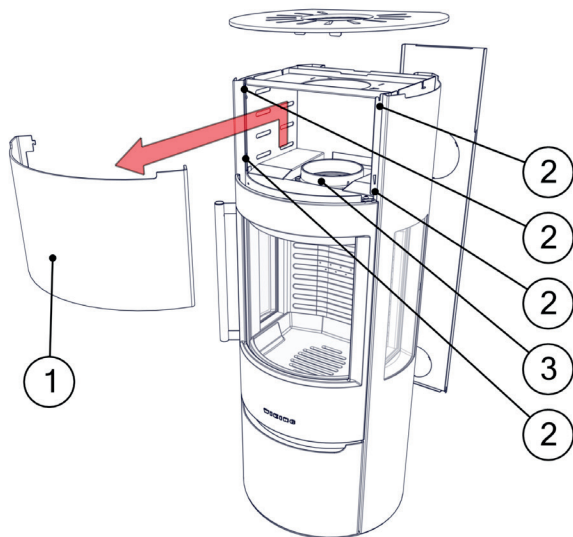**D****F**

**G**

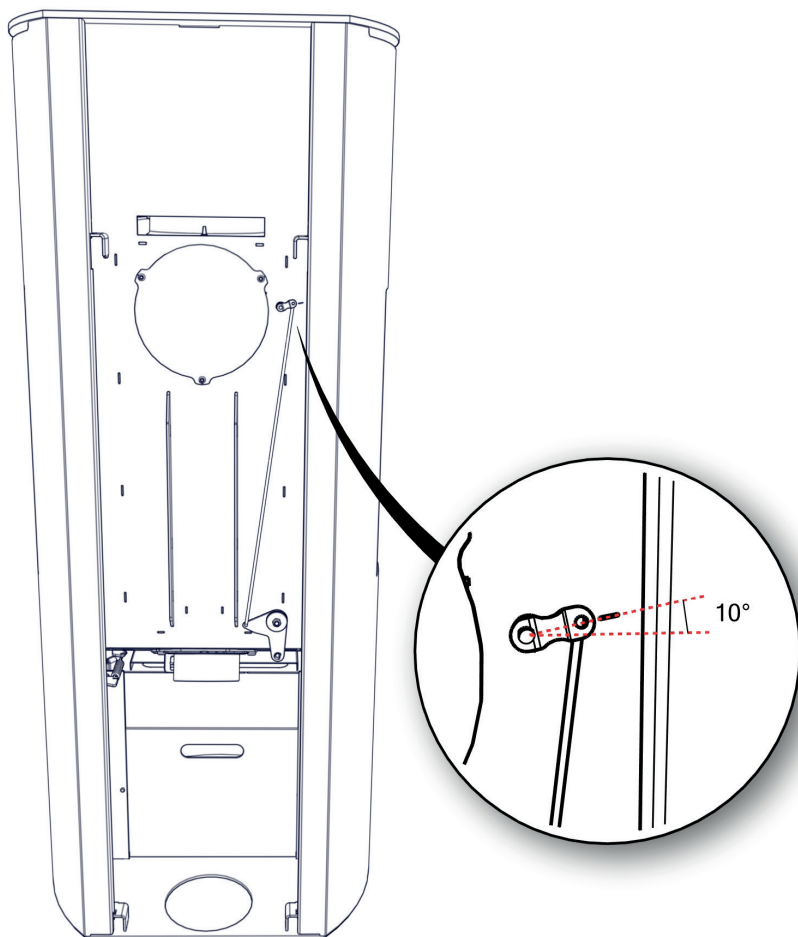





# INSTALLATION

---

## In general

Congratulations on your new WIKING woodburning stove. We are pleased that you have chosen a WIKING woodburning stove and confident that it will give you much pleasure. To ensure optimum operation and safety, we recommend that the installation should be carried out by an authorised WIKING retailer or a fitter recommended by the retailer. For an overview of WIKING retailers, visit [www.wiking.com](http://www.wiking.com) under "Retailer locations".

## Safety

The installation of your WIKING woodburning stove must always comply with all European, national and local building regulations. The installation must be carried out in accordance with the instructions in the installation and user manuals and subsequently registered with the local authorities. Upon installation, the chimney sweep must approve the installation before you can start using the woodburning stove. All WIKING woodburning stove packaging material must be handled in accordance with local waste management regulations.

## Room requirements

Always ensure a supply of fresh combustion air to the room where the stove is to be installed. The woodburning stove uses approx. 9-20 m<sup>3</sup> of air per hour. A window that can be opened or an adjustable air valve will be sufficient. It must not be possible to block the adjustable air valve/grate. In newly built/airtight dwellings, we recommend that a fresh air system should be installed for the direct supply of external air to the combustion. This fresh-air system may be bought separately.

Before installing the stove, you must ensure that the load-bearing capacity of the floor can withstand the weight of the stove and the chimney. The weight of the chimney should be calculated according to its dimensions and height.

## Technical measures and data

<b>Test results from nominal test EN 13240</b>	
Nominal heating effect	7.0 kW
Flue gas temperature EN 13240 measurement point	286°C
Flue gas temperature measured in the outlet socket	343°C
Exhaust gas flow	5.2 g/s
Efficiency	81 %
Annual efficiency (EcoDesign)	71 %
PM	5 mg/m <sup>3</sup>
OGC	67 mg/m <sup>3</sup>
NO <sub>2</sub>	101 mg/m <sup>3</sup>
CO at 13% O <sub>2</sub>	1187 mg/m <sup>3</sup>
CO at 13% O <sub>2</sub>	0.0949 %
Energy efficiency index	107
Energy efficiency class	A+
<b>Test result based on NS 3058</b>	
Particle emissions	2.46 g/kg

The declaration of performance (DoP) can be downloaded from our website, [www.wiking.com](http://www.wiking.com).

Model	Weight	Height	Width	Dept
Luma 1	117 kg	80.1 cm	53.0 cm	46.0 cm
Luma 1 on pedestal	136 kg	112.1 cm	53,6 cm	45.8 cm
Luma 2	114 kg	80.1 cm	53.0 cm	46.0 cm
Luma 2 on pedestall	133 kg	112.1 cm	53.6 cm	45.8 cm
Luma 3	120 kg	108.4 cm	53.0 cm	45.4 cm
Luma 4	117 kg	108.4 cm	53.0 cm	45.4 cm
Luma 4 with natural stone cladding grey	231 kg	111.8 cm	57.3 cm	46.0 cm
Luma 4 with tile cladding	145 kg	111.8 cm	57.3 cm	46.0 cm
Luma 5	129 kg	132.4 cm	53.0 cm	45.4 cm
Luma 6	126 kg	132.4 cm	53.0 cm	45.4 cm
Luma 6 with natural stone cladding grey	262 kg	135.8 cm	57.3 cm	46,0 cm
Luma 6 with natural stone cladding white	231 kg	135.8 cm	57.3 cm	46,0 cm
Heat storage stones, Luma 5+6	45 kg			

### Floor plate

European, national and local regulations must be observed in terms of the size and thickness of a non-combustible floor covering the floor in front of the combustion chamber opening. Ask your WIKING retailer for assistance. The combustion chamber opening is 35,7 cm wide.

### Distance to combustible materials

<b>Min. distances - <u>uninsulated flue gas pipe</u>:</b>	<b>Luma 1 Luma 3 Luma 5</b>	<b>Luma 2 Luma 4 Luma 6</b>	<b>Luma 4 with stone cladding Luma 6 with stone cladding</b>
Recommended for brick wall, back	10 cm	10 cm	10 cm
Recommended for brick wall, side	20 cm	10 cm	10 cm
For combustible wall, back	12.5 cm	15 cm	15 cm
For combustible wall, side	60 cm	40 cm	40 cm
To combustible wall, corner installation, 45°	31.5 cm	7.5 cm	7.5 cm
Combustible floor under neith the stove	28.3* cm	28.3* cm	
Distance to furnishings in front	105 cm	115 cm	115 cm

\* Applies only to WIKING Luma 1 and WIKING Luma 2. This distance requirement is observed when the wood-burning stove is mounted on a pedestal or a wall with the required distance below the wood-burning stove.

<b>Min. distances - insulated flue gas pipe:</b>	<b>Luma 1 Luma 3 Luma 5</b>	<b>Luma 2 Luma 4 Luma 6</b>	<b>Luma 4 with stone cladding Luma 6 with stone cladding</b>
Recommended for brick wall, back	10 cm	10 cm	10 cm
Recommended for brick wall, side	20 cm	10 cm	10 cm
For combustible wall, back	5 cm	5 cm	5 cm
For combustible wall, side	60 cm	45 cm	45 cm
To combustible wall, corner installation, 45°	31.5 cm	5 cm	5 cm
Combustible floor under neith the stove	28.3* cm	28.3* cm	
Distance to furnishings in front	105 cm	115 cm	115 cm

\* Applies only to WIKING Luma 1 and WIKING Luma 2. This distance requirement is observed when the wood-burning stove is mounted on a pedestal or a wall with the required distance below the wood-burning stove.

### **IMPORTANT:**

- If WIKING Luma 1/WIKING Luma 2 are to be mounted on a wall, the wall must be constructed in non-combustible materials and there must be a distance of 28.3 cm to a combustible floor (measured from the bottom plate of the wood-burning stove) whether or not a floor plate has been laid on the floor.
- Do not install WIKING Luma 1 without a pedestal / WIKING Luma 2 without a pedestal on a combustible floor. A combustible floor is still considered combustible even if a non-combustible floor plate has been laid on the floor for the purpose of capturing any embers from the wood-burning stove..
- If WIKING Luma 1 without a pedestal / WIKING Luma 2 without a pedestal are placed directly on the floor, a non-combustible construction of minimum 42.5 cm is required in front of the stove.

**Remember to pay attention to the applicable regulations concerning the required distance between the wall and smoke pipe.**

Please be aware that not all glass parts are heat-resistant. For this reason, a glass wall should sometimes be treated as a combustible wall, in which case we ask you to contact your local chimney sweep or glass producer to hear at what distance the stove should be kept from glass.

### **Requirements for chimney and smoke pipe**

The height of the chimney must ensure sufficient draught and prevent any smoke nuisance. As a general rule, satisfactory draught conditions are achieved if the chimney is 4 m above the stove and at least 80 cm above the ridge. If the chimney is placed at side walls, the top of the chimney should always be higher than the ridge or the tallest point of the roof. Always be aware of any national and/or local regulations applying to thatched roofs and the location of the chimneys.

The woodburning stove requires a minimum draught of 12 Pa (measured at EN 13240 measurement point). If measured just above the smoke flue socket, the chimney draught must be 18-20 Pa.

The chimney must have a minimum clearing of Ø 150 mm. The chimney must be provided with an easily accessible cleaning door. The chimney and flue duct must be of flue class T400 and be CE marked. Furthermore, it must have obtained the classification of G in soot fire testing. The required distance to combustible material must be complied with in accordance with the brand label. Ask your WIKING retailer for further information.

### **Changing the Smoke Outlet from Top Outlet to Back Outlet**

#### **(WIKING Luma 1 - Luma 4)**

Proceed as follows to change the smoke outlet from top outlet to back outlet:

1. Lift the top plate off the stove.
2. Lift the rear plate off the stove.
3. Remove the smoke ring on the top of the stove by unscrewing the three screws and lifting it off.
4. There is a cut-out for the flue duct in the back plate. Break off the plate within this cut-out to make a hole that the flue duct can fit into.
5. Remove the cover plate on the back of the stove by unscrewing the three screws (Torx Bit no. 30) and lifting it off.
6. Install the cover plate on top of the stove with the three screws.
7. Place the smoke ring in the smoke outlet hole in the back of the stove and secure it with the three screws.
8. Place the rear plate on the stove again.
9. Replace the top plate on stove.

A top flue blanking plate can be bought as an accessory to cover the hole in the top plate of the stove if the stove is connected to a back smoke outlet.

### **Changing the Smoke Outlet from Top Outlet to Back Outlet**

#### **(WIKING Luma 5 - Luma 6) (drawing F)**

Proceed as follows to change the smoke outlet from top outlet to back outlet:

1. Lift the top plate off the stove.
2. Lift the rear plate off the stove.
3. Lift the front (1) of the heat storage compartment up and forward, unhooking it from the four guide pins (2).
4. Loosen and remove the three screws in the flue ring (3) in the bottom of the heat storage compartment. Remove the smoke ring.
5. There is a cut-out for the flue duct in the back plate. Break off the plate (4) within this cut-out to make a hole that the flue duct can fit into. It is recommended that you use a wire-cutter.
6. Remove the cover plate at the rear of the stove by loosening and removing the three screws (Torx Bit no. 30) and lifting it off.
7. Mount the cover plate over the smoke outlet in the bottom of the heat storage compartment, using the three screws.
8. Place the smoke ring in the smoke outlet hole in the back of the stove and secure it with the three screws.
9. Hook the front (1) on to the four guide pins (2).
10. Place the rear plate on the stove again.
11. Place the top plate on the stove again.

A top flue blanking plate can be bought as an accessory to cover the hole in the top plate of the stove if the stove is connected to a back smoke outlet.

## Connection to chimney

All the stoves have both back and top smoke outlet that can be connected to an approved steel chimney on top or directly out at the rear to a chimney.

Make sure that the chimney is tight and that no false draft is caused around neither the cover plate, in connection with a covered smoke outlet, nor the cleanout door and pipe connections. Please note that bent and/or horizontal smoke pipes will reduce the effect of the chimney draft.

Vertical cross-section of the stoves (drawing A1 and A2)

A1: Luma 1+3+5

A2: Luma 2+4+6

1. Steel baffle plate.
2. Vermiculite baffle plate.
3. Vermiculite corner plates.
4. Vermiculite rear plate.
5. Vermiculite side plates.
6. Vermiculite side bottom piece.
7. Protection during transportation

Please note: The combustion chamber is covered with plates made of vermiculite, which is a heat-insulating material. These plates ensure that the optimal combustion temperature is quickly reached, and they must therefore remain inside in the wood-burning stove.

The steel smoke deflector and the vermiculite smoke deflector ensure that the passage of smoke through the stove is as long as possible, so that the flue gasses have more time to emit their warmth within the stove and the surrounding area. In this way you get more warmth from the wood you add to the stove, as the warm smoke is not simply sent out through the chimney.

## Fitting the loose parts

Before the stove is installed, you must ensure that all loose parts are fitted correctly. Check that all insulation plates of the combustion chamber have been properly placed, i.e. that the bottom plate is horizontal and that the side plates are vertical and reach all the way up to the steel sides of the combustion chamber and down to the bottom plate.

Vertical cross-section of the stoves (drawing A1 and A2)

1. The steel baffle plate (1) is hung from two hooks and equipped with two pins (7) that serve as protection during transportation. Remember to remove the two pins before you start using the stove.
2. The vermiculite baffle plate (2) must rest on the rear plate (4) and the Skamolex side plates (5) must be pushed to the very rear of the combustion chamber.
3. The rear plate (4) must be pushed all the way back in the combustion chamber.
4. The corner plates (3), side plates (5) and side bottom pieces (6) must be pushed up against the steel and firmly fixed in the combustion chamber.

## Chimney

The chimney is the “engine” of the stove and it is crucial for the functioning of the woodburning stove. The chimney draft provides a partial vacuum in the stove. This vacuum removes the smoke from the stove, sucks air through the dampers for the so-called glass pane rinse which keeps the glass free of soot, and sucks in air through both primary and secondary dampers for the combustion.

The chimney draft is created by the differences in temperature inside and outside the chimney. The higher the temperature within the chimney, the greater the draft. It is crucial, therefore, that the chimney is warmed up properly before closing the damper and limiting the combustion in the stove (a brick chimney takes longer to warm up than a steel chimney). On days where the weather and wind conditions create insufficient draught inside the chimney, it is even more important to warm up the chimney as quickly as possible. The trick is to quickly get some flames going. Split the wood into extra fine pieces, use an extra firelighter, etc.

If the stove has not been used for a longer period, it is important to check that the chimney pipe is not blocked.

It is possible to connect several devices to the same chimney. However, it is important to first check the applicable rules.

### **Chimney sweeping**

To prevent the risk of chimney fires, the chimney must be cleaned every year. The flue duct and the smoke chamber above the baffle plate must be cleaned together with the chimney. If the chimney is too tall to be cleaned from above, it must be equipped with a soot door.

In case of a chimney fire, close all dampers and call the firefighters. Before any further use, have the chimney checked by the chimney sweeper.

### **The type badge and the serial number (Drawing C)**

On WIKING Luma 1/Luma 2 the type badge and serial number are glued onto an extension plate located in the left side next to the locking hook. Lift off the front plate (1) as shown in the drawing and pull the little handle gently (2).

On WIKING Luma 3/Luma 4/Luma 5/Luma 6 the type badge and the serial number are placed on the inside of the door below the combustion chamber.

# FIRING MANUAL - WOOD

---

## **Your first heating session**

The lacquer will be fully hardened after the stove has been used, and the door and the ashpan should be opened very carefully as there will otherwise be a risk that the gaskets will stick to the lacquer. In addition the lacquer may initially give off an unpleasant odour, so make sure that the room is well ventilated.

**Warning:** The accompanying glove may wear the surface paint off. Be careful not to touch the varnished surfaces the first two to three times you light the fire. Even after the paint has hardened, repeated use of the glove may wear the surface paint off.

## **Tips about fuel**

### **Approved fuel types**

The wood burning stove is EN approved for combustion of wood only. It is recommended to use dried chopped wood with a water content of a maximum of 18%. Stoking a fire with wet wood results in soot, environmental problems, and a less efficient fuel economy.

### **Recommended wood types**

All types of wood, for instance birch, beech, oak, elm, ash, conifers, and fruit trees can be used as fuel in your insert. The great difference is not in the fuel value, but in the weight of the wood types per cubic metre. Beech weighs more per m<sup>3</sup> of wood than common spruce, for instance. This is why more common spruce is required, in terms of volume, to obtain an amount of heat similar to that of beech. Heavy types of wood such as ash, beech, oak and elm are generally not that easy to light up. In addition, they burn more slowly and give off more embers. Light types of wood such as birch, maple, spruce and pine are more easy to light up. They burn faster and give off fewer embers. You may therefore take advantage of the light types of wood for lighting and use the heavier types of wood to ensure a longer burning time..

### **Banned fuel types**

It is not allowed to stoke a fire with the following: printed matter, plywood, plastic, rubber, fluid fuels, and rubbish such as milk cartons, lacquered wood or impregnated wood and fossil fuels. The reason that you should not apply any of the above is that during combustion they develop substances that are health hazardous and harmful to the environment. These substances could also damage your wood burning stove and chimney, rendering the product warranty void.

### **Storage of wood**

A moisture content of 12-18% is achieved by storing recently felled wood outdoors under a lean-to for at least one year, preferably 2 years. Wood stored indoors has a tendency to become too dry and combust too quickly. However, it might be advantageous to store fuel for lighting a fire indoors for a few days prior to use.

It is recommended to purchase a wood moisture meter to continuously check that the firewood has the correct moisture content before using it for firing. Split the wood and measure the moisture content of the split surfaces.

### **Recommended dimensions**

The dimensions of the fuel are important to good combustion. The dimensions should be as follows:

Fuel type	Length in cm	Diameter in cm
Wood for kindling a fire (finely chopped)	20-30	2-5
Chopped wood	20-30	7-10

## Using the Air Damper

To achieve good combustion, which results in better heating efficiency, it is important to add the right amount of air to the fire. Air is regulated with a user-friendly, one-lever system that is located under the stove door; see drawing D.

When lighting a cold stove and when fuelling with new wood, the regulating lever must be pushed to the extreme left to give the fire maximum air supply. When the fire is burning well, the air supply can be gradually reduced by moving the regulating lever to the right.

The fire will die out if the regulating lever is moved to the extreme right. This setting should only be used in the case of overheating, if there is a fire in the chimney and when the fire in the stove has been allowed to go out completely in connection with cleaning, for instance.

## Special fire lighting guide for stoves with stone and tile cladding

Stone are natural products which need to adjust to temperature changes. We recommend following the procedure below:

### 1. First stoking



Move the air control lever to the extreme left to fully open the air supply to the combustion chamber. Place two pieces of wood (5-8 cm in diameter) horizontally in the bottom of the combustion compartment (corresponding to 1-2 kg). Place 5-8 pieces of kindling randomly on top. Place 2 firelighters between the top layer of kindling. Light up the fire-lighters and close

the stove door. If condensation forms on the glass, keep the door ajar for a little while and close again. When all of the wood has caught fire, the air supply can be gradually reduced by moving the air control lever to the right until uniform, steady combustion is achieved. When the fire has gone out, open the door and leave it open while the stove cools to room temperature.

### 2. Second stoking

Move the air control lever to the extreme left to fully open the air supply to the combustion chamber. Place two pieces of wood (5-8 cm in diameter) horizontally in the bottom of the combustion compartment (corresponding to 1-2 kg). Place 5-8 pieces of kindling randomly on top. Place 2 firelighters between the top layer of kindling. Light up the fire-lighters and close the stove door. If condensation forms on the glass, keep the door ajar for a little while and close again. When there are no more visible yellow flames, and a right ember is there, you can fire again. The layer of embers is suitable when the pieces of wood begin to disintegrate and the bottom of the stove is covered by embers. Carefully open the door to prevent smoke and embers from escaping. Place 2 pieces of new firewood (up to 1-2,5) with a diameter of approx. 7-9 cm in the combustion chamber. When all of the wood has caught fire, the air supply can be gradually reduced by moving the air control lever to the right until uniform, steady combustion is achieved. Allow the fire to burn and let the stove cool to room temperature before stoking again.

### 3. Third stoking

Repeat the procedure for the second stoking. Allow the fire to burn and let the stove cool to room temperature after the fire has gone out.

### Restoking

Follow the general instructions, see the sections "Lighting the stove" and "Stoking".



## Lighting the stove

A successful combustion process requires that the wood is lit in the right way. A cold stove and a cold chimney challenge the combustion process. Be careful to make a good lighting with suitably dry wood, using kindling and lighting the fire in the top layers of kindling. It is important to achieve a high flue gas temperature quickly.



Move the air control lever to the extreme left to fully open the air supply to the combustion chamber. Place two pieces of wood (5-8 cm in diameter) horizontally in the bottom of the combustion compartment (corresponding to 1-2 kg). Place 5-8 pieces of kindling randomly on top. Place 2 firelighters between the top layer of kindling. Light up the fire-lighters and close the stove door. If condensation forms on the glass, keep the door ajar for a little while and close again. When all of the wood has caught fire, the air supply can be gradually reduced by moving the air control lever to the right until uniform, steady combustion is achieved.

**Important!** The ash pan must not be opened during the lighting stage and must always be kept closed when the stove is lit or the WIKING® Automatic™ might be damaged. Only open the door when lighting the stove, refuelling it and cleaning it. Never leave a stove before there are lasting flames in the wood after firing!

## Stoking

When there are no more visible yellow flames, and a right ember is there, you can fire again. The layer of embers is suitable when the pieces of wood begin to disintegrate and the bottom of the stove is covered by embers. Carefully open the door to prevent smoke and embers from escaping. Place 2 pieces of chopped firewood (approx. 1-2.5 kg) on top of the embers. Close the door again and fully open the air supply by moving the regulating lever to the extreme left. When the wood has caught fire properly, the air supply can be gradually reduced by moving the air control lever to the right until uniform, steady combustion is achieved. The further to the right the air control lever is moved, the less heat the stove will give off. But it is important not to regulate the air supply below a level at which there are still visible flames and steady combustion.

**During combustion, the outer surfaces of the stove will become hot, and due care must therefore be shown.**

## When burning is complete

When the stove is not in use, turn the air control lever all the way to the right.

## Cleaning the glass

We recommend wiping the glass after a fire. This is best done using a paper towel.

## Fuelling with coal or pet coke

The stove is not approved to use coal or pet coke as a fuel.

# FIRING IN GENERAL

---

## **Rapid or fierce heat**

Rapid or fierce heat is obtained by burning many small pieces of wood.

## **Maximum amounts of fuel:**

The maximum allowed amount of fuel per hour is:

Wood: 3 kg

If these limits are exceeded, the stove will no longer be covered by the factory guarantee, and it may also become damaged due to excessive heat, the glass may turn white, for example.. The stove has been approved for intermittent use.

## **Typical re-firing interval**

Typical re-firing interval at nominal performance

Wood: 46 min (1.58 kg)

## **Prolonged burning time**

You will obtain the longest burning time if you reduce the air supply to an absolute minimum when the flames are dying, as this will prolong the ember phase. When you add new firewood, set the air supply at about 40% to allow the wood to catch fire.

How to achieve the best combustion

- **Use clean and dry wood**

Wet wood results in inefficient combustion, plenty of smoke, and soot. Furthermore, the heat will dry the wood, not heat up the room.

- **The fire should only be stoked with a little wood at a time**

You achieve the best combustion by starting up a fire often and using only a little wood. If you use too much firewood, it will take some time before the temperature reaches a level where you achieve a good combustion.

- **Make sure there is the right amount of air**

You should also make sure that there is plenty of air – especially in the beginning - so the temperature in the wood burning stove climbs quickly. In this way the gasses and particles released during the combustion will be consumed by the fire. Otherwise they build up soot in the chimney (constituting a chimney fire risk) or will be released in a non-combusted state into the environment. The wrong amount of air supply creates inefficient combustion and a modest effect.

- **Don't savour the fire during night time**

We advise against adding fire wood to your stove and reducing the air supply at night in an attempt to still have some embers left in the morning. If you do so, large amounts of hazardous smoke will be emitted, and your chimney will be exposed to unnecessarily large amounts of soot with the risk of a chimney fire.

# MAINTENANCE

---

## Cleaning

Any maintenance of the stove should only be carried out when it is cold. Daily maintenance is limited to vacuum cleaning the stove externally, using the soft brush attachment. You can also dust the stove using a dry, soft cloth or brush. But remember, only when the stove is cold. Do not use water, spirit or any other kind of cleaner, as this will damage the lacquer.

Once a year, the stove should be thoroughly serviced. The combustion chamber should be cleared of ashes and soot. The hinges and the closing hook must be greased with liquid copper fat spray (heat-resistant up to 1100°C). Lift the door approx. ½ cm and spray copper fat onto the hinge leaf.

## Service inspection

Your stove should be given a thorough, preventive inspection once every two years. This includes:

- Thorough cleaning of the stove.
- Checking the spring in the WIKING® Automatic™. Replace if necessary.
- Checking gaskets. Replace gaskets if they are not intact or are no longer soft.
- Checking and/or replacing insulation material.
- Checking the combustion chamber base.
- Use copper grease for hinges and locking hooks

All service checks must be performed by an authorised fitter. Use only original spare parts.

## Inside cleaning

Before chimney sweeping can be performed, the air control lever must be set to its minimum position to prevent soot and ash from entering the WIKING® Automatic™. Unless the safety fittings for transportation (2 split pins) have not already been removed, start by removing the split pins (drawing A, 7). First remove ash and soot from the combustion chamber. In drawing E1/E2 you can see which plates are found inside the combustion chamber. Carefully remove the vermiculite plates, one after the other, in the following sequence:

### WIKING Luma 1+3+5

1. The side plates (1)
2. The side bottom pieces (2)
3. The corner plates (3)
4. The baffle plate (top plate) (4)
5. The rear plate (5)

### WIKING Luma 2+4+6

1. The side plates (1)
2. The corner plates (3)
3. The baffle plate (top plate) (4)
4. The rear plate (5)

After cleaning, carefully put the vermiculite plates back in place in the reverse order starting with the rear plate.

## Ashes

It is easiest to empty the ash pan by pulling a plastic bag over it, turning it upside down and then carefully removing it from the bag. Ashes are disposed of via the domestic waste collection.

**Please note that there may be embers in the ashes for up to 24 hours after the fire has gone out!**

## **Insulation**

The efficient, but porous insulation of the combustion chamber may, in time, be worn and damaged. Cracks in the insulation are irrelevant to the efficiency of the stove. A crack in the back plate can cause secondary air to become incorrectly distributed in the combustion chamber, and it should therefore be replaced. However, it should be replaced, if there are actual holes due to parts of the lining falling off or when, due to wear and tear, it has been reduced to less than half its original thickness.

## **WIKING® Automatic™**

The spring in the WIKING® Automatic™ should be controlled at least once every second year. **(Drawing G):** Lift the top plate off the stove. Lift the rear plate of the stove. On a cold stove, the starting point of the feeler is controlled. The starting point on a cold stove is about 10° above horizontal. It should feel easy going and bouncy when you push it, no matter if the stove is cold or hot. Mount the rear plate and the top plate again.

## **Door/glass**

A sooty glass door can easily be cleaned with a piece of moist kitchen roll dipped in ash. Go about it in vertical movements (up and down). Follow up with a dry piece of kitchen roll. You should also ensure that air gaps in the door frame are free of ash and soot particles.

## **Seals**

Check frequently to ensure that seals in the door and ash pan are intact and not brittle. Failing this, they should be replaced. Use original seals only.

## **Surface**

Usually, it is not necessary to any treatment to the painted surfaces of the wood-burning stove. Any damage to the paint may, however, be remedied with spray paint, which can be bought from your stove retailer.

## **Guarantee**

The guarantee does not cover damage due to insufficient maintenance!

# DECLARATION OF PERFORMANCE

---

The DoP can be downloaded from our website via the following links:

[www.wiking.com/dop/luma](http://www.wiking.com/dop/luma)

## Product information on solid fuel local space heaters according to Commission regulation (EU) 2015/1185

<b>Model</b>	WIKING LUMA 1, WIKING LUMA 2, WIKING LUMA 3, WIKING LUMA 4, WIKING LUMA 5, WIKING LUMA 6
<b>Direct heat output [kW]</b>	7,0
<b>Indirect heating functionality</b>	No
<b>Indirect heat output [kW]</b>	-
<b>Type of heat output/room temperature control</b>	Two ore more manual stages, no temperature control

Space heating performance at nominal heat output		
Fuel	Preferred fuel	Seasonal space heating energy efficiency [%]
Wood logs with moisture content 12-18 %	Yes	71
<b>Emissions</b>	<b>mg/m<sup>3</sup> (13% O<sub>2</sub>)</b>	
Particulate matter (PM)		5
Organic gaseous compounds (OGC)		67
Carbon monoxide (CO)		1187
Nitrogen oxides (NO <sub>x</sub> )		101

Characteristics when operating with the preferred fuel only	
Nominal heat output [kW]	7,0
Electric power consumption nominal heat output [kW]	-
Electric power consumption minimum heat output [kW]	-
Electric power consumption standby mode [kW]	-
Useful efficiency at nominal heat output [%]	81
Energy efficiency index	107
Energy efficiency class	A+

### Specific Precautions during Assembling, Installing & Maintenance:

See installation instructions for more information

### Product End-of-Life/Recycling:

To dispose of the stove after the product life has expired, please observe the following information

- Dispose of the items correctly i.e. separate the parts to be disposed of in material groups
- Always dispose of items in a way that is as sustainable as possible and that is in line with the current environmental protection, reprocessing/recycling and disposal technology

# Trouble Shooting

If you experience that your wood-burning stove is not functioning optimally, consult this table to find some usual problems that may arise and how to solve them. If you cannot solve them and/or other problems occur, please contact your maintenance man or wood-burning stove dealer.

Problem	Possible Cause	Try the Following
I cannot make a sufficient fire in the stove.	Incorrect lighting.	Further information: See the section on lighting and firing the stove.
	Poor chimney draft.	Ensure that the smoke pipe or chimney is not blocked. Ensure that the chimney height is correct in relation to its surroundings.
The glass pane is covered in soot.	The wood is too moist.	Only fire with firewood that has dried for at least 12 months beneath a covered shed and with a water content of 12-18%.
	A seal in the door is loose.	The seals should be soft and flexible. If they are not, replace them. New seals can be purchased from your local wood-burning stove dealer.
	Insufficient supply of secondary air to the pane-flushing system.	Move the air control lever further to the left.
	The temperature inside the stove is too low.	Put more wood in the stove and move the regulating lever further to the left.
Smoke enters the room when I open the door.	The damper in the chimney is closed.	Open the damper.
	Poor chimney draft.	Ensure that the smoke pipe or chimney is not blocked. Ensure that the chimney height is correct in relation to its surroundings.
	The firewood is in flames.	Never open the door if the firewood is in flames.
The fire-proof materials in the combustion chamber are blackened after firing.	You have not fired enough, i.e., there is not enough air or firewood.	Move the air control lever further to the left. Moreover, igniting a larger quantity of wood might be needed.
Combustion is uncontrollable.	A seal in the door or ash drawer is loose.	The seals should be soft and flexible. If they are not, replace them. New seals can be purchased from your local wood-burning stove dealer.
	Excess chimney draft.	Close the damper in the chimney a bit at a time until the problem is solved. At the same time, move the air control lever further to the right.
	The door is not completely sealed.	Close the door completely. If it cannot close completely, it must be replaced with an original spare part.

Serial nr.



## Warranty service

It is important that you record your retailers name, address and telephone number on this section, as he is responsible for any adjustment which may be required during the warranty period.

\_\_\_\_\_  
Model type

\_\_\_\_\_  
Date of purchase

\_\_\_\_\_  
Retailer

\_\_\_\_\_  
Address

\_\_\_\_\_  
Tel.